

## REQUIRED TOOLS



POWER DRILL &  
HAMMER DRILL



4FT. LEVEL




7MM MASONRY BIT




5MM FORSTNER BIT



PENCIL OR MARKER

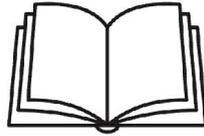

REFERENCE LAYOUT

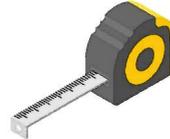

TAPE MEASURE




LASER LEVEL



STEP LADDER



RUBBER Mallet

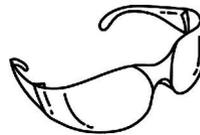

SAFETY GLASSES



HACKSAW  
OR A  
MITER SAW

## INCLUDED HARDWARE

MAY VARY DEPENDING ON LAYOUT



COAT HOOK




LOCK SET  
LEFT / RIGHT HAND




HINGE SET  
SYMBOL "A" RH & LHR  
SYMBOL "B" LH & RHR




KNOB  
ADA DOOR ONLY

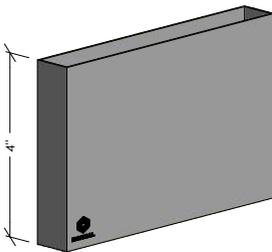

SHOE  
WIDTH VARIES FROM  
4"-24"

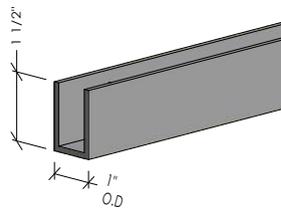

WALL PANEL ANCHOR  
72" PILASTER & PANEL LENGTH

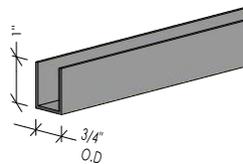

OVERHEAD BRACE & FLOOR ANCHOR  
12FT LENGTH  
CUT AS NEEDED



FOOT  
AVAILABLE IN  
ASPEN SERIES ONLY

## ADDITIONAL HARDWARE

LENGTH AND USE OF HARDWARE MAY VARY

### ANCHORS



CONCRETE WALL/FLOOR ANCHOR



DRYWALL ANCHORS

### FASTNERS



3/4" PAN HEAD SCREW




1.5" PAN HEAD SCREW




1-.75" TAPCON

**STEP 1**


ESTABLISH WALL / FLOOR ANCHOR BRACE

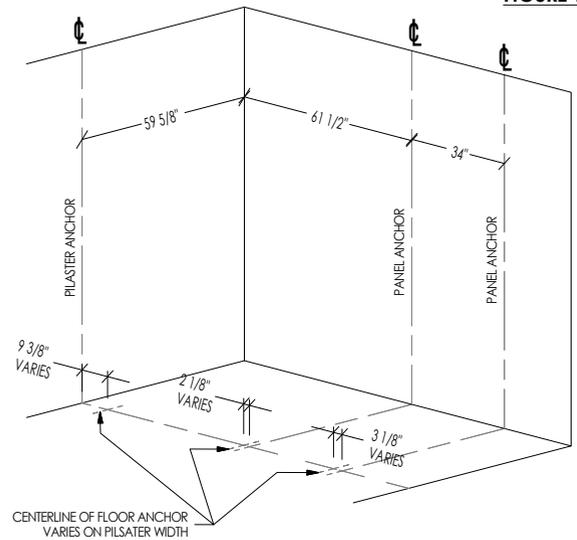**FIGURE 1**

**STEP 2**

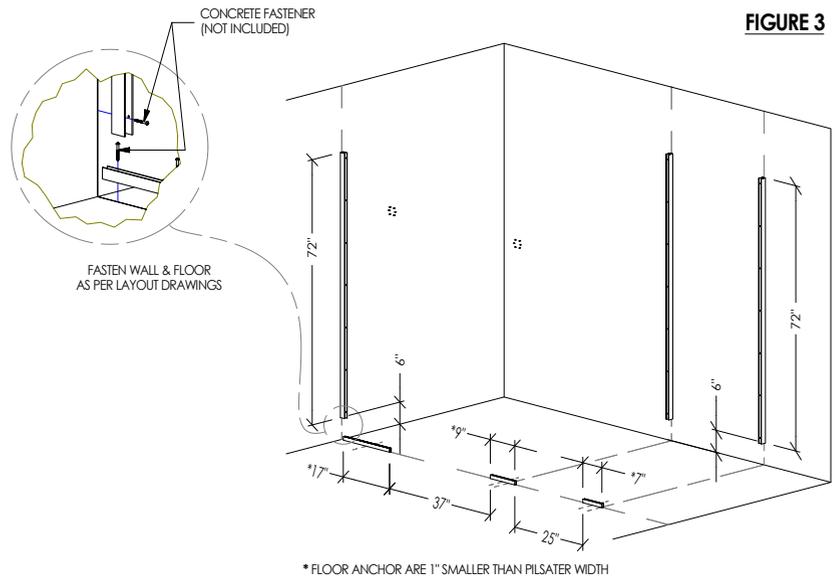
FASTEN WALL / FLOOR ANCHORS

**FIGURE 3**

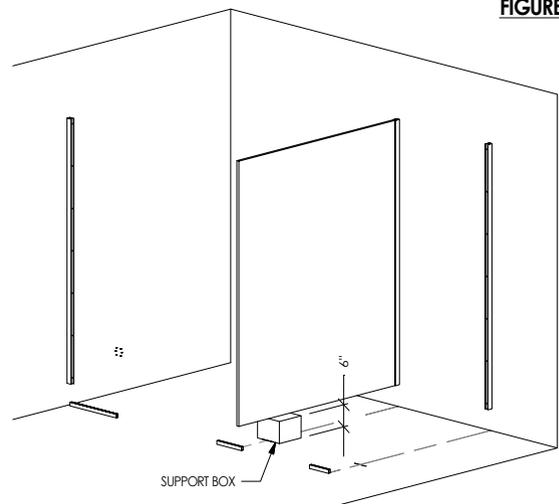**STEP 3**


ERECT PANEL PARTITION

**FIGURE 3**

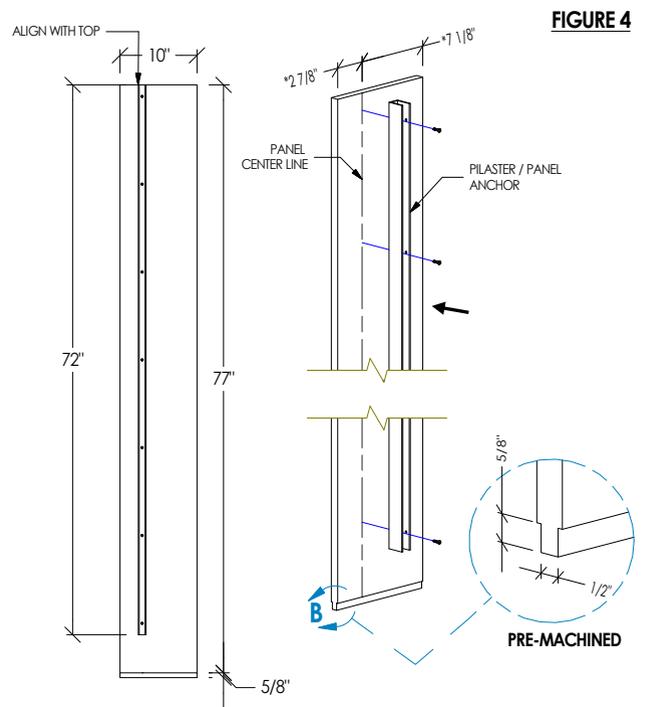**NOTE: DO NOT FASTEN PANEL AT THIS TIME**


**STEP 4**  
PILASTER PREPARATION

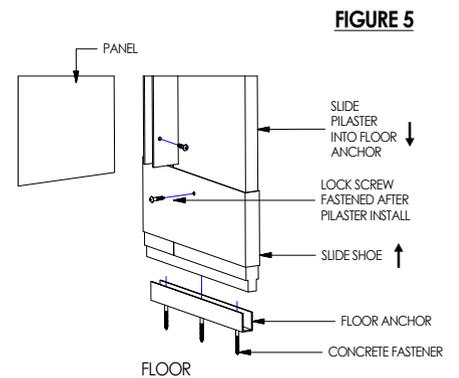

**STEP 5**  
PILASTER FLOOR INSTALLATION



**STEP 6**  
PANEL INSTALLATION

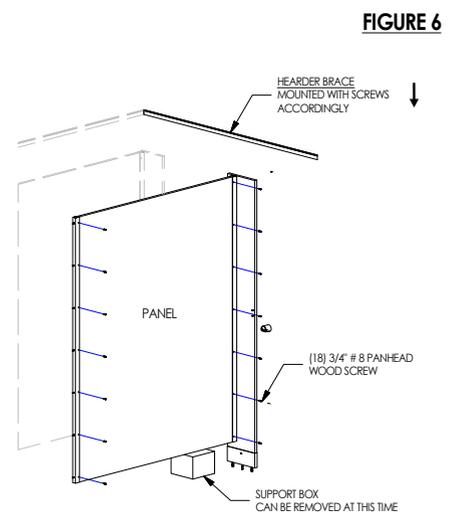

NOTE: FASTEN PANEL AT BACKWALL AND PILASTER

## DOOR INSTALLATION

ADA DOOR SHOWN BELOW

